



### **INSTALLATION INSTRUCTIONS**

# M1-4530

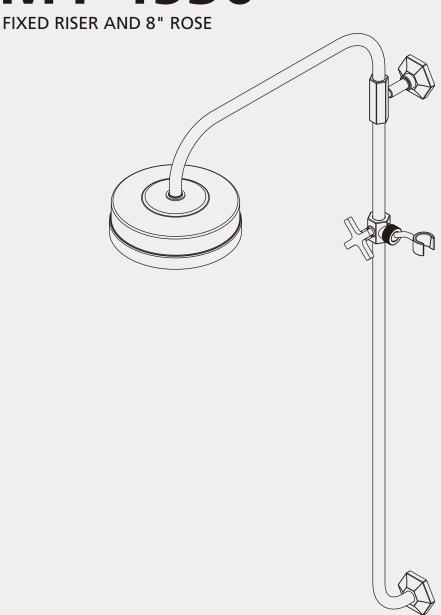

M1-4530

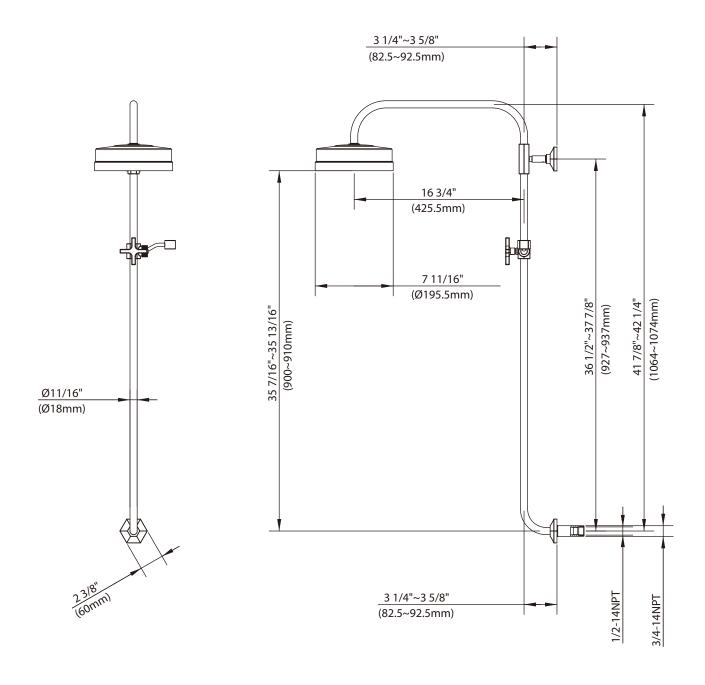

## What you need to know

### **Tools:**

Adjustable Wrench Groove Joint Pliers Hacksaw Phillips Screwdriver Pipe Tape Spatula Spirit Level



### **Maintenance**

Your new bathroom faucet is designed for years of trouble-free performance.

Keep it looking new by cleaning it periodically with a soft cloth. Avoid abrasive cleaners, wire wool and harsh chemicals as these will dull the finish and void your warranty.

## **Safety Tips**

If you are soldering during faucet installation, remove cartridges, seats, gaskets and washers prior to applying flame, otherwise you will void the warranty.

Cover drain openings to avoid losing small parts.

When cutting or soldering pipe, use safety glasses to protect your eyes.

## **Important Points**

Prior to beginning installation. turn off the cold and hot water lines and open the old faucet to release built-up pressure.

Overtightening nuts may cause damage.

Wrap all threaded connections with pipe tape available at your local plumbing supply store. Always wrap in a clockwise direction. The fittings should be installed by a state-licenced plumber.

#### Please note:

When there is a difference in water pressure between hot and cold supplies to the mixing valve, the pressures should by equalized by a plumber in accordance with best practice and legislation.


## **Things You May Need**

Correct installation may vary depending on previous faucet installation. All necessary supplies required for faucet installation are not included, but may be found where plumbing supplies are sold. It is suggested that IAPMO and/or CSA approved plumbing supplies are used during installation.

### **Standards**

### **Flow Rate**

Meets A112.18.1




#### Please note:

Final achievable flow rate is dependent on the outlets fitted, see relevant outlets (spouts, roses, sprays) for fully assembled product flow rate.

## Steps 1

## **Installation Procedure**

Lefroy Brooks always recommends that plumbing products be installed by a licensed professional. Shut off main water supply before installation.

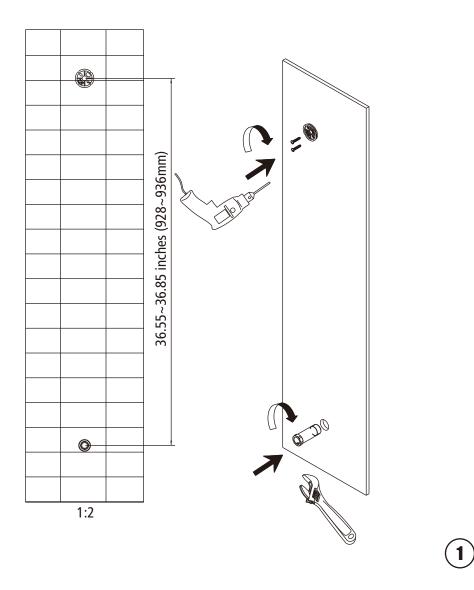


Install the Inlet and locate the wall bracket. Make sure that the distance between the inlet and the wall bracket is 36.55~36.85 inches (928~936mm).

## Steps 2-3

## **Installation Procedure**

Lefroy Brooks always recommends that plumbing products be installed by a licensed professional. Shut off main water supply before installation.

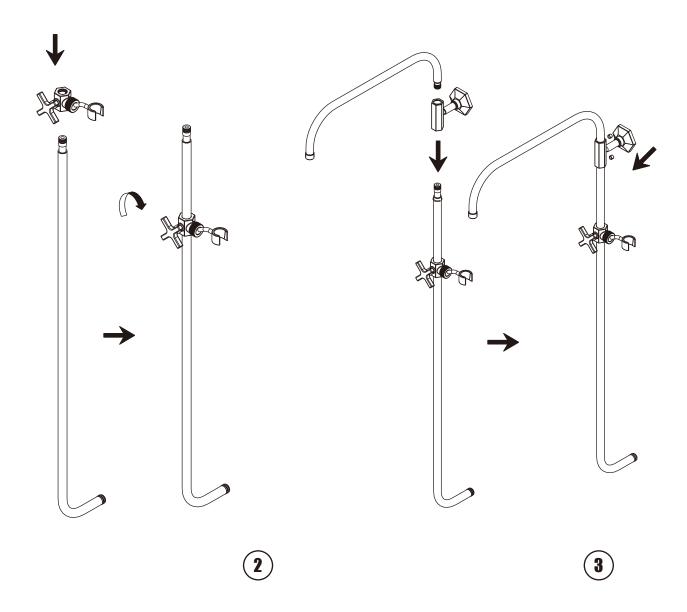


- Slide the assembly of shower bracket over the pipe, and fix it in the desired position, by tightening the handle of slider.
- Assemble shower arm and the brass pipe with O-rings attached. The position of the hexagonal adaptor is an up-or-down 4mm adjustment. Tighten the shower arm and the brass pipe to the hexagonal adaptor with set screws supplied.

## Steps 4-5

## **Installation Procedure**

Lefroy Brooks always recommends that plumbing products be installed by a licensed professional. Shut off main water supply before installation.

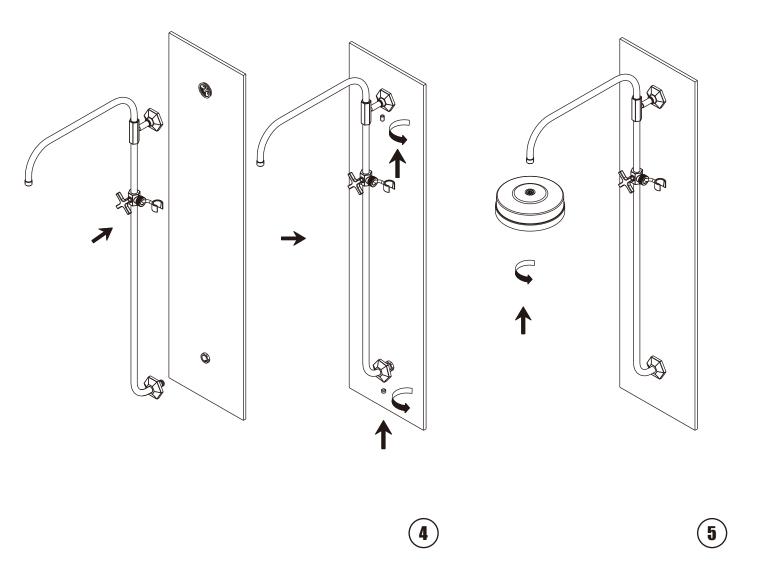


- Install the assembly of shower pipe to the Inlet and wall bracket, and tighten with set screws supplied.
- Flush debris from the pipes and check for leaks. Finally install the showerhead to the shower arm.

# **Exploded View**

## **Parts List**

M1-4530

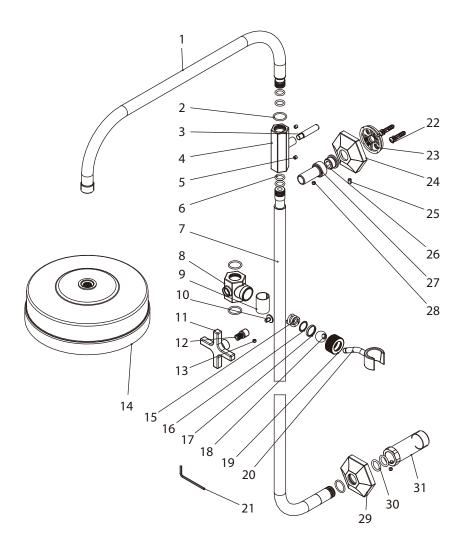

1	Shower arm (020979)	12	Adaptor (067445)	23	Mounting bracket (293190)
2	O-ring (004074N)	13	Set screw (292598)	24	Base (019337)
3	Fixing bolt (017969)	14	8" Shower head (\$1110819)	25	Set screw (075039)
4	Adaptor (126096)	15	Spring (005156)	26	Adaptor (067446)
5	Set screw (292505)	16	Washer (013614)	27	Adaptor (126097)
6	O-ring (048038)	17	Washer (060023)	28	Set screw (075052)
7	Brass tube (020981)	18	Ball joint (067444)	29	Base (019338)
8	Seat (126098)	19	Nut (009317)	30	O-ring (004035N)
9	Fixer (126099)	20	Shower bracket (117003)	31	Inlet (014617)
10	Screw (008674)	21	Allen key (031000)		
11	Handle (029685)	22	Fixing kit (290411)		

### For additional assistance or service call

718-302-5292

9am to 5pm EST Monday to Friday



www.lefroybrooks.com

LEFROY BROOKS INC, 1828 TROUTMAN STREET, RIDGEWOOD, NY, 11385 TELEPHONE: 718-302-5292. FAX: 718-302-4177