

#### INSTALLATION INSTRUCTIONS

# C1-4710 (LB1560)

CROSS HANDLE TUBULAR 3-HOLE KITCHEN MIXER

# CW-4711 (WL1560)

WHITE LEVER TUBULAR 3-HOLE KITCHEN MIXER

# CB-4711 (BL1560)

**BLACK LEVER TUBULAR 3-HOLE KITCHEN MIXER** 




C1-4710 (LB1560)


CW-4711 (WL1560)

CB-4711 (BL1560)


C1-4710 (LB1560)

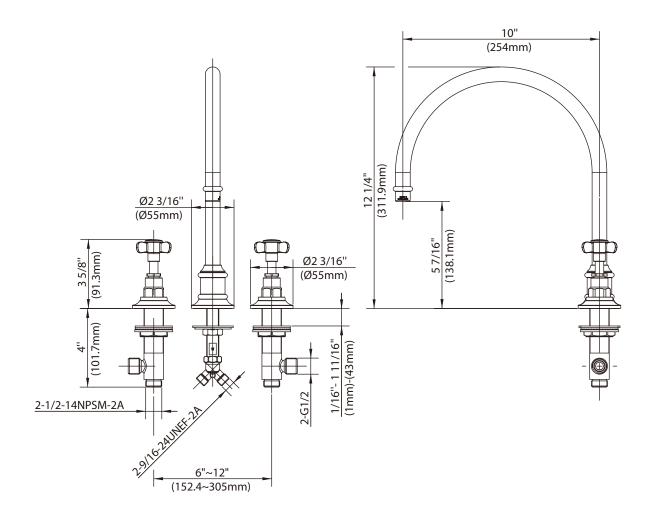

CW-4711 (WL1560)

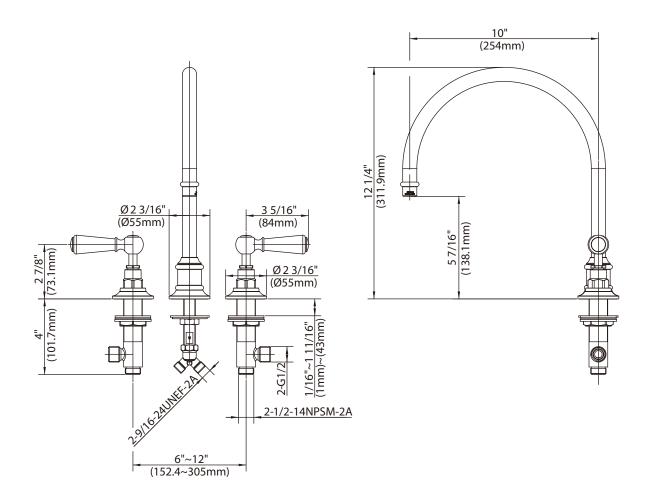

CB-4711 (BL1560)

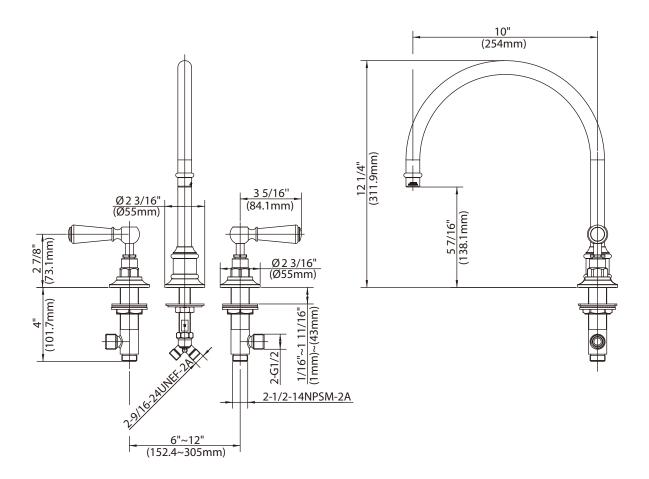

## What you need to know

### **Tools:**

Adjustable Wrench Groove Joint Pliers Hacksaw Phillips Screwdriver Pipe Tape Spatula Spirit Level



### **Maintenance**

Your new bathroom faucet is designed for years of trouble-free performance.

Keep it looking new by cleaning it periodically with a soft cloth. Avoid abrasive cleaners, wire wool and harsh chemicals as these will dull the finish and void your warranty.

### **Safety Tips**

If you are soldering during faucet installation, remove cartridges, seats, gaskets and washers prior to applying flame, otherwise you will void the warranty.

Cover drain openings to avoid losing small parts.

When cutting or soldering pipe, use safety glasses to protect your eyes.

### **Important Points**

Prior to beginning installation. turn off the cold and hot water lines and open the old faucet to release built-up pressure.

Overtightening nuts may cause damage.

Wrap all threaded connections with pipe tape available at your local plumbing supply store. Always wrap in a clockwise direction. The fittings should be installed by a state-licenced plumber.

#### Please note:

When there is a difference in water pressure between hot and cold supplies to the mixing valve, the pressures should by equalized by a plumber in accordance with best practice and legislation.


### **Things You May Need**

Correct installation may vary depending on previous faucet installation. All necessary supplies required for faucet installation are not included, but may be found where plumbing supplies are sold. It is suggested that IAPMO and/or CSA approved plumbing supplies are used during installation.

### **Standards**

IAPMO/cUPC Listed Meets NSF 61-9 Meets A112.18.1

### **Flow Rate**

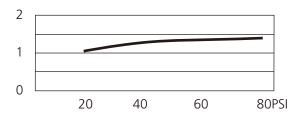


#### Please note:

Final achievable flow rate is dependent on the outlets fitted, see relevant outlets (spouts, roses, sprays) for fully assembled product flow rate.

## Steps 1-2

### **Installation Procedure**

Lefroy Brooks always recommends that plumbing products be installed by a licensed professional. Shut off main water supply before installation.

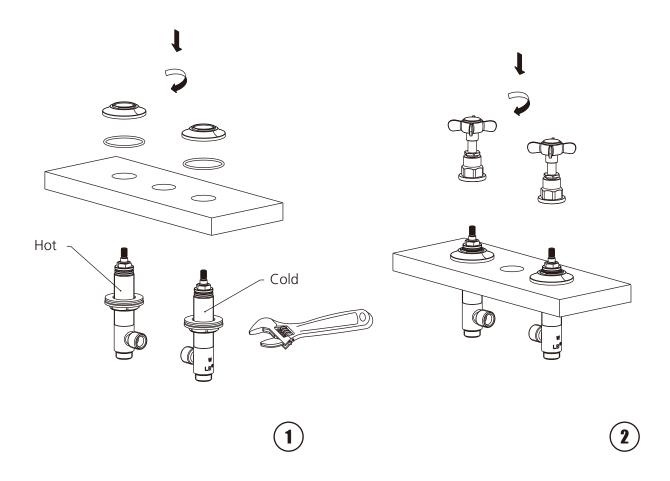


- Install the Hot-side-body in the left hole and the Cold-side-body in the right hole.
- Install Hot and Cold handle assemblies.

## Steps 3-4

### **Installation Procedure**

Lefroy Brooks always recommends that plumbing products be installed by a licensed professional. Shut off main water supply before installation.

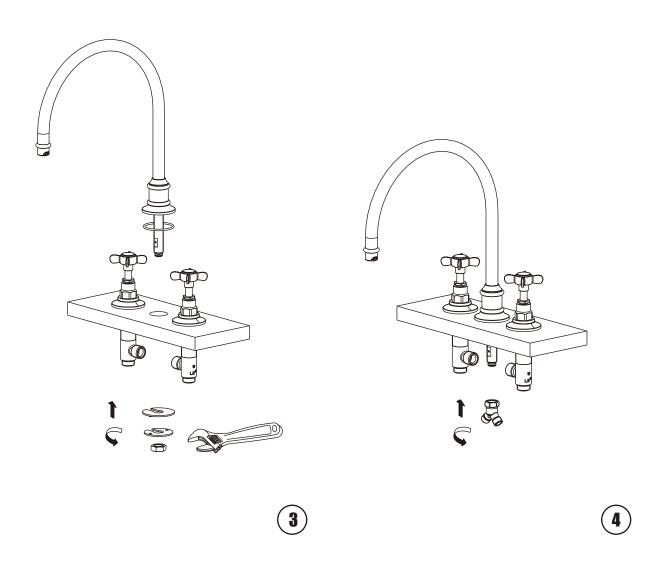


Fix the spout.

Install the connector.

## Steps 5-8

### **Installation Procedure**

Lefroy Brooks always recommends that plumbing products be installed by a licensed professional. Shut off main water supply before installation.

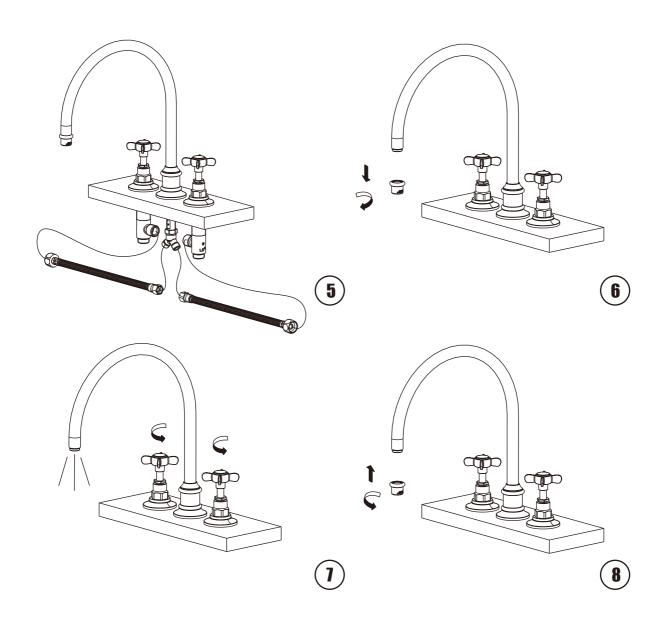


- Install the hose.
- Take off aerator.

- Turn on water supply and handle to clear away debris.
- Turn off handle and re-assemble the aerator carefully.

# **Exploded View**

### **Parts List**


C1-4710 (LB1560)

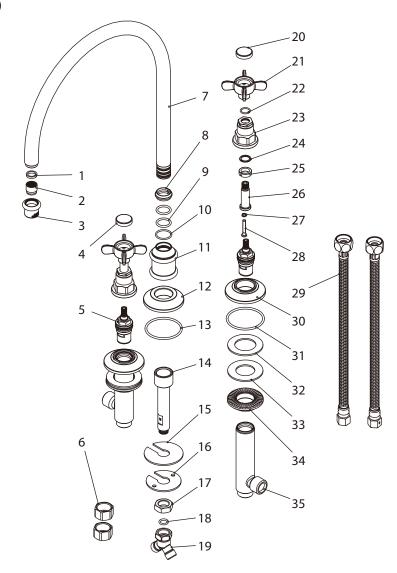

1	Oil seal (010519N)	13	O-ring (004617)	25	Clip (012242)
2	Aerator insert (553661N)	14	Connecting tub (014905W)	26	Stem extension (110461)
3	Aerator housing (305849N-54)	15	Oil seal (058094)	27	Washer (013570)
4	Ceramic cap ( H ) (129312H)	16	Washer (013006)	28	Screw (008670)
5	Cartridge (507907N)	17	Nut (009015)	29	Flexible hose (105750W)
6	Copper nut (504003)	18	O-ring (004026N)	30	Escutcheon (215486)
7	Spout sssembly (139871W)	19	Connector (015004W)	31	O-ring (004627)
8	Clip (012003)	20	Ceramic cap ( C ) (129312C)	32	Oil seal (010017)
9	O-ring (004005N)	21	Handle (029721-T)	33	Washer (013158)
10	O-ring (004109N)	22	O-ring (048085)	34	Nut (009834)
11	Canopy (000088)	23	Canopy (018220)	35	Side body (061893W)
12	Escutcheon (303461)	24	Washer (013224)		•

# **Exploded View**


### **Parts List**

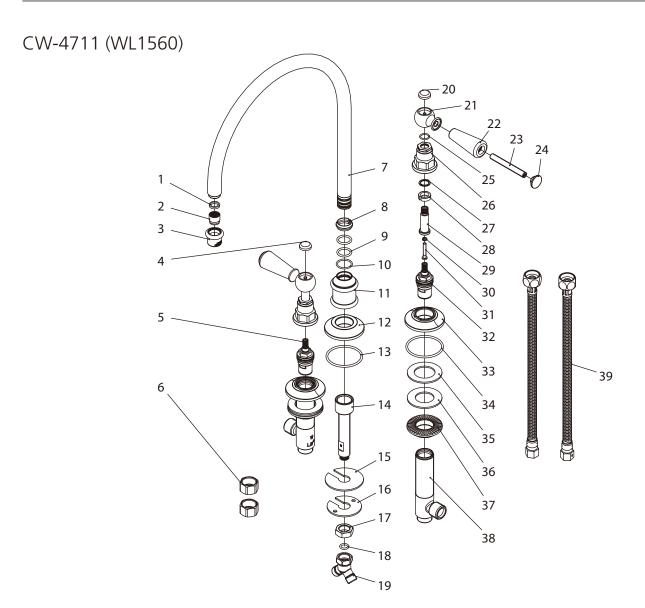

1	Oil seal (010519N)	14	Connecting tub (014905W)	27	Washer (013224)
2	Aerator insert (553661N)	15	Oil seal (058094)	28	Clip (012242)
3	Aerator housing (305849N-54)	16	Washer (013006)	29	Stem extension (110461)
4	Ceramic cap ( H ) (129313H)	17	Nut (009015)	30	Washer (013570)
5	Cartridge ( H ) (507175N)	18	O-ring (004026N)	31	Screw (008670)
6	Copper nut (504003)	19	Connector (015004W)	32	Cartridge ( C ) (507176N)
7	Spout sssembly (139871W)	20	Ceramic cap ( C ) (129313C)	33	Escutcheon (215486)
8	Clip (012003)	21	Adaptor (205144)	34	O-ring (004627)
9	O-ring (004005N)	22	Handle sleeve (108924)	35	Oil seal (010017)
10	O-ring (004109N)	23	Handle stem (017094)	36	Washer (013158)
11	Canopy (000088)	24	Handle-end cap (109376)	37	Nut (009834)
12	Escutcheon (303461)	25	O-ring (048085)	38	Side body (061893W)
13	O-ring (004617)	26	Canopy (018220)	39	Flexible hose (105750W)

# **Exploded View**

### **Parts List**

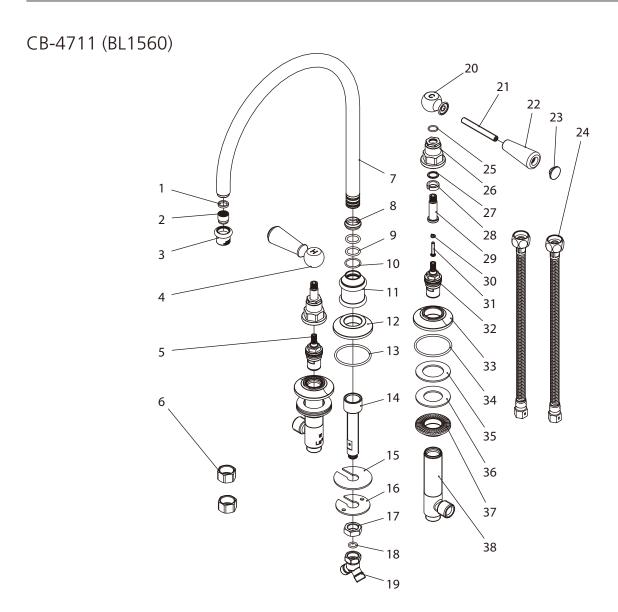

1	Oil seal (010519N)	14	Connecting tub (014905W)	27	Washer (013224)
2	Aerator insert (553661N)	15	Oil seal (058094)	28	Clip (012242)
3	Aerator housing (305849N-54)	16	Washer (013006)	29	Stem extension (110461)
4	Adaptor ( H ) (205143H)	17	Nut (009015)	30	Washer (013570)
5	Cartridge ( H ) (507175N)	18	O-ring (004026N)	31	Screw (008744)
6	Copper nut (504003)	19	Connector (015004W)	32	Cartridge ( C ) (507176N)
7	Spout sssembly (139871W)	20	Adaptor ( C ) (205143C)	33	Escutcheon (215486)
8	Clip (012003)	21	Handle stem (017094)	34	O-ring (004627)
9	O-ring (004005N)	22	Handle sleeve (108924)	35	Oil seal (010017)
10	O-ring (004109N)	23	Handle-end cap (109376)	36	Washer (013158)
11	Canopy (000088)	24	Flexible hose (105750W)	37	Nut (009834)
12	Escutcheon (303461)	25	O-ring (048085)	38	Side body (061893W)
13	O-ring (004617)	26	Canopy (018220)		,

#### For additional assistance or service call

718-302-5292

9am to 5pm EST Monday to Friday



www.lefroybrooks.com

LEFROY BROOKS INC, 1828 TROUTMAN STREET, RIDGEWOOD, NY, 11385 TELEPHONE: 718-302-5292. FAX: 718-302-4177